



Mission Zero:
our promise to eliminate
any negative impact our company
may have on the environment
by the year 2020.



INSTALLATION MANUAL

Contents

01	BEFORE STARTING	page 3
02	CONDITIONING OF MATERIALS	page 3
03	FLOOR PREPARATION	page 3
04	INSTALLATION SET OUT	page 6
05	ANTI-SLIP COMPOUND – INTER-TAC®	page 7
06	APPLICATION OF ADHESIVE	page 7
07	TACTILES	page 7
08	TACTILE PLACEMENT	page 8
09	TACTILE SUBFLOOR PREPARATION REQUIREMENTS	page 10
10	UNDERFLOOR HEATING	page 10
11	LAYING DIRECTION	page 10
12	COMMENCING THE INSTALLATION	page 11
13	ACCESS FLOORING	page 11
14	STAIRS	page 12
15	INSTALLING FIXTURES & FURNITURE AFTER MODULAR CARPET INSTALLATION	page 12
16	FINISH	page 12
17	CONCLUSION	page 13
18	CUSHIONBAC MODULAR CARPET	page 13

Appendices

01	CONCRETE SUBFLOOR REQUIREMENTS	page 13
02	MOISTURE & PH TEST RESULT RECOMMENDATIONS	page 14
03	INTERFACE INSTALLATION METHODS & CODES	page 15

Introduction

This manual has been prepared by the Interface technical division to assist professional contractors and layers in the installation of Interface and Heuga modular carpet.

These instructions cover the most common installation circumstances. If a particular installation condition is not covered, the contractor should contact an Interface representative.

If Interface or Heuga modular carpet

is installed before construction is complete, any resulting staining, soiling, contamination or damage caused by building construction may void the end user's product warranty. The contractor should inform the appropriate person of this warranty implication.

01 BEFORE STARTING

It is the responsibility of the contractor to verify, before the installation, that material supplied conforms to owner's specifications, including correct product, colour and quantity.

Labels on each carton contain important information including: product, colour and manufacturing batch (dye lot information).

It is not recommended to mix dye lots in the same area, with the exception of the i2™ collection of products as they possess mergable dye lots.

Take particular notice of installation codes printed on cartons as this indicates the manufacturers' recommended installation method. However the client's preferred installation method should be confirmed and signed off by the installer before commencement of installation.

02 CONDITIONING OF MATERIALS

The installation location and all products and materials used in the installation, must be at temperature between 15 degrees C – 35 degrees C for a period of 48 – 72 hours before the installation begins. The temperature must remain within this range throughout the installation. Relative humidity in the area should be 45% ± 10%.

03 FLOOR PREPARATION

The subfloor must be rigid, dry, smooth, flat, level, sound, clean and free from harmful materials. When installing GlasBac® modular carpet products, no bitumen based substance must come in contact with the GlasBac backing.

The subfloor must be rigid to stop modular carpet from cupping.

Old carpet, under felt, loose laid vinyl, cushion backed vinyl and any old adhesive must be removed and floor scraped clean.

A clean floor – Floor should be free from all dirt, dust and harmful materials. Before applying Intertac sweep and vacuum the subfloor to remove all dust. Concrete or timber floors must be primed with an approved primer such as ARDEX P60 before application of Intertac.

A dry floor – All floors must be dry. New concrete floors must be checked for moisture as per Interface recommendations.

Moisture content must not exceed levels as indicated in Appendix 1 of the Interface Installation Manual. **If the moisture content is above the recommended maximum readings STOP and DO NOT PROCEED with the installation. Seek further advice from Interface before proceeding.**

A low pH floor – The subfloor should have an alkalinity level of between pH7 & pH9 to be suitable for carpet installation (Refer to Appendix 1). **Should the pH level be outside this range STOP and DO NOT PROCEED with the installation. Seek further advice from Interface before proceeding.**

Identify the Type of Floor

New concrete floors – Must be smooth, level and dry as per Appendix 1 & 2.

Old concrete floors – Remove paint, sealer, grease, oil, adhesive and any harmful materials, especially bituminous based substances which are not compatible with GlasBac modular carpet products. All existing adhesive must be removed from the floor. Fill and level all cracks and holes. Bring surface up to specification as in Appendix 1 using an approved levelling compound in accordance with manufacturer's directions. The selected levelling compound needs to be compatible with the adhesive and carpet backing system.

Any existing carpet, under felt, loose laid vinyl, cushion back vinyl and all existing adhesive must be removed and the floor scraped clean.

Vinyl Tiles – Damaged & loose vinyl tiles must be replaced or patched and all existing wax coated products are to be removed. Any existing bituminous based adhesive or underlay are to be removed when installing GlasBac modular carpet products.

Ensure that the bond between vinyl tiles and subfloor will last the service life of the modular carpet.

If a sealer is used, any reaction shall be the contractor and end-user's responsibility.

Ceramic and quarry tiles – All joints are to be filled and levelled as per Appendix 1. Use rough Sandpaper to remove surface glaze.

Wood Floors – Unless the subfloor is free from grooves, ridges, gaps, holes or similar imperfections, the use of a hard underlay is recommended.

Underlay – The underlay should be medium density fibre boards or medium density fibrous cement sheet underlay and the fixing material must be compatible with the Interface modular carpet and Inter-Tac adhesive. Installation shall be in accordance with the underlay manufacturer's instructions.

Sealer / Moisture Barrier – If a sealer is used on a concrete floor it must be compatible with vinyl and can be either a solvent or water based sealer which can be acrylic, epoxy, urethane or chlorinated rubber. Sealers must also be used in accordance with manufacturer's directions. If in doubt, coat sealer on back of the tile and leave overnight. It is not suitable for use if it remains sticky.

An example of suitable products to use for sealing against Hydrostatic moisture problems would be ARDEX - WPM300 epoxy.

An example of a suitable product to use for sealing against new build green slab moisture problems would be ARDEX - S8 Slab Seal.



NOTE: WHEN INSTALLING NON IMPERVIOUS BACKED FLOOR COVERINGS, WATER BASED ADHESIVES, APART FROM PRESSURE SENSITIVE ADHESIVES, CANNOT BE USED ON A SEALED FLOOR.





NOTE: WHERE PRACTICAL THERE SHOULD BE UNCUT MODULAR CARPET TILES IN DOORWAYS AND HIGH TRAFFIC AREAS.

04 INSTALLATION SET OUT

General

In setting up, a point in the room shall be determined from which modular carpet can be laid to ensure that they are parallel to the longest wall.

Procedure

The procedure for setting out shall be in accordance with the following, as shown in Figure 1.

Step 1

Mark a line EF parallel to the longest wall.

Step 2

Mark point X along line EF at a distance to ensure that the requirements of perimeter modular carpet are a minimum of $\frac{1}{3}$ width.

Step 3

Mark points J1 and J2 at a distance of 3 m each side of X.

Step 4

At J1 and J2 scribe an arc at a distance of 5 m to establish point K where arcs intersect.

Step 5

Draw a line through points K and X which will be 90 degrees to line EF.

Single Room Installation

Step 1

Establish two chalk lines at 90 degrees as shown in Figure 1. This line may be established slightly off centre to enable you to meet other requirements, such as placing uncut modular carpet in traffic areas.

Step 2

Commencing only at the cross point of the two chalk lines, complete one row of modular carpet on each side of the centre line.

Step 3

Anchor your basic installation as shown in Figure 2. Complete the body of the installation by laying in a triangular method.

Step 4

Complete the remaining quadrants, section by section.

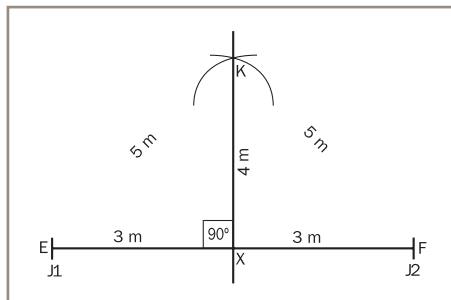


Figure 1

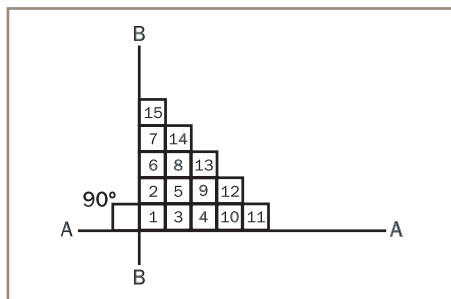
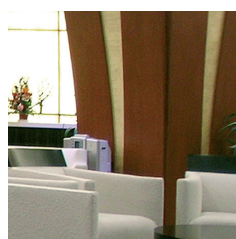


Figure 2



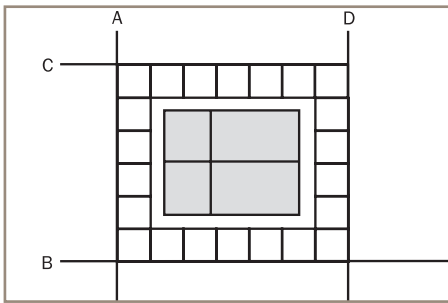


Figure 3a

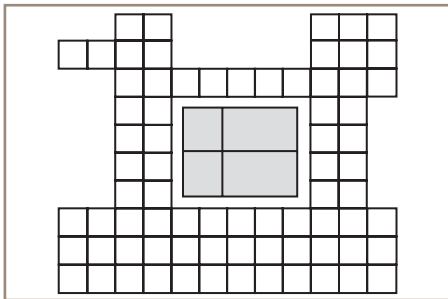


Figure 3b

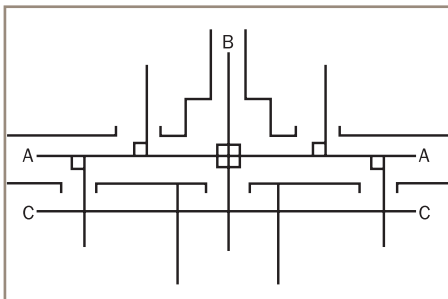


Figure 4

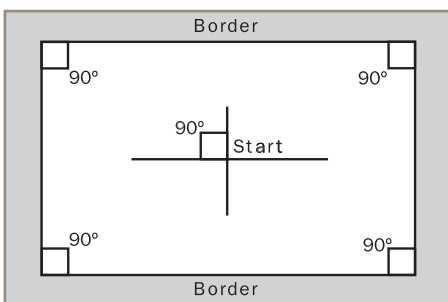


Figure 5

Large Area with Obstacles

Example: An Elevator

Step 1

Establish your starting point as shown in Figure 3a, with the A-B at 90 degrees.

Step 2

Pass your obstacle along line A and B with a minimum of 1 and 1/3 modular carpet. At this point you will establish line C and D, parallel to line B and A.

Step 3

Complete modular carpet between A and B. (Notice, only a single row of modular carpet is used for this exercise).

Step 4

Continue to anchor your installation. Fill in the remaining quadrants as shown in Figure 3b.

Office Complex

Step 1

The crossover point, centre corridor, centre hall is the starting point for this example as shown in Figure 4. Line A and B should again be at 90 degree angles.

Lay a row of modular carpet on each side along chalk line A. At the entrance of each office passed, a chalk line is projected into that office at 90 degrees. Complete your corridor including cutting.

Step 2

Lay the modular carpet into the offices and anchor the installation. This will create line C parallel to line A. The total installation is lined out. Complete the body of installation by laying in a triangular method as shown in Figure 3.

Step 3

Complete all cut modular carpet in the corridor, including door ways. Lay and anchor modular carpet along line C. Fill in the remaining parts.

Borders

Set out chalk lines at the required distance for the border and/or field colour modular carpet. Ensure all 90 degree angles are correct. Use these chalk lines as wall lines and cut modular carpet up to these lines. Cut border modular carpet in from chalk line to compensate for any irregularities in the wall. Refer to Figure 5.



05 INTER-TAC® Pressure Sensitive Adhesive

All Interface modular carpets require 100% application of Intertac, unless utilising TacTile, or otherwise specified by manufacturer.

Intertac is a low odour, solvent free pressure sensitive adhesive.

The subfloor should be prepared to Interface recommendations.

An approved primer such as ARDEX P60 must be used on all porous surfaces.

Before application of Intertac the subfloor should be vacuumed and washed to remove all dust from the subfloor.

06 APPLICATION OF ADHESIVE



NOTE: A NEW LONG NAP ROLLER SHOULD BE USED AT THE START OF EACH INSTALLATION.

NOTE: IN CERTAIN CONDITIONS, SUCH AS UNDER HOSPITAL BEDS, ON RAMPS OR IN AREAS THAT MAY BE SUBJECT TO HIGH TRAFFIC ABUSE, A STRONGER BOND TO THE SUBFLOOR MAY BE REQUIRED.

FOR A STRONGER BOND A HIGHER WEIGHT OF ADHESIVE SHOULD BE APPLIED: EG V1 NOTCH TROWEL. THE TILE IS THEN INSTALLED INTO SEMI-TACKED UP INTERTAC ADHESIVE ALLOWING FOR SOME ADHESIVE TRANSFER TO OCCUR.

NOTE: TACK UP TIME WILL BE RELEVANT TO HUMIDITY IN THE WORK AREA AND GENERAL SITE CONDITIONS.

Inter-Tac is a pressure sensitive compound. For general installation requirements application of Intertac is by long nap roller achieving a spread rate of 10-14m² per litre depending on the condition of the substrate. On non-porous floors the rate of application will change and a spread rate greater than 14m² per litre may be obtained in some cases.

Adhesive application should not commence until moisture and pH readings of the subfloor have been taken and the subfloor deemed within specified requirements. If the subfloor moisture or pH readings are higher than recommended the installation should not commence until remedial action is taken. Refer to Appendix 1 & 2.

It is mandatory that Inter-Tac must tack up before use. Colour must change from green to clear and it must not transfer.

Users assume all risk and liability resulting from the use of Inter-Tac. It is recommended that users carry out project specific trials to confirm the suitability and application of Inter-Tac.

Note: A new long nap roller should be used at the start of each installation.

Note: In certain conditions a stronger bond to the subfloor may be required. For a stronger bond the tile can be installed into semi-tacked up Intertac adhesive allowing for some adhesive transfer to occur.

07 TACTILES™





NOTE: WHEN USING TACTILE IN A GLASBAC INSTALLATION THE TACTILE IS USABLE FOR TWO INSTALLATIONS AFTER WHICH A NEW TACTILE SHOULD BE USED.



NOTE: A TACTILE MUST BE APPLIED UNDER EVERY CUT TILE ABUTTING THE FIELD TILES.

NOTE: ALL BITUMEN BACKED PRODUCTS MUST USE GRAHPLEX TACTILE.

NOTE: STANDARD TACTILE MUST BE USED FOR ALL PRODUCTS ON GLASBAC AND GLASBACRE BACKING.



NOTE: A TACTILE MUST BE APPLIED UNDER EVERY CUT TILE ABUTTING THE FIELD TILES.

FOR BRICK AND ASHLAR INSTALLATIONS, IF NEEDED, TACTILES CONNECTORS CAN BE APPLIED AT ALL JOINTS. THIS IS NOT REQUIRED BUT LEFT TO THE DEALER'S DISCRETION WHEN CONDITIONS SUGGEST ADDITIONAL TACTILES CONNECTORS ARE NECESSARY.

GlasBac & GlasBacRE Backing Systems – Standard TacTiles must be used in the installation of both GlasBac and GlasBacRE carpet tile. To lift existing carpet tiles simply peel the carpet tile from the TacTile and fit a new carpet tile to the existing TacTile.

Grahplex, Graphlar & CushionBac Backing Systems – Graphlex branded TacTile must be used for the installation of Graphlex, Graphlar and CushionBac carpet tile. To lift existing carpet tiles simply peel the carpet tile from the TacTile and fit a new carpet tile and new TacTile.

TacTiles reach maximum bond strength after four hours.

TacTile can be installed directly over wood, ceramic, marble and stone floors with minimum floor preparation as long as moisture and pH levels are within Interface recommendations. Refer to Appendix 1 & 2.

Once the installation is completed and then maintained in line with Interface installation and maintenance recommendations TacTiles will be effective for the life of the installation providing they are not removed or replaced.

Rolling Loads – TacTiles can be used under areas that will be subjected to normal commercial rolling load applications. Eg: Castor Chair, Hand Trolleys or similar.

For areas that will be subjected to heavy rolling loads such as pallet trolleys, fork lifts, scissor lifts, etc, please contact Interface Technical Services for project specific advice.

Ramps – TacTile is not recommended for use on ramped floor areas. The use of Intertac pressure sensitive adhesive is recommended when installing modular tile to ramped floor areas.


08 TACTILE PLACEMENT

For Quarter Turn / Monolithic / Non Directional Installation methods


A TacTile should be placed under every corner of each tile across the installation area and all cut tiles abutting the field tiles.

For Brick or Ashlar Installation methods

A TacTile should be placed on every other corner across the installation area and all cut tiles abutting the field tiles. TacTiles should be applied based on the following diagrams.

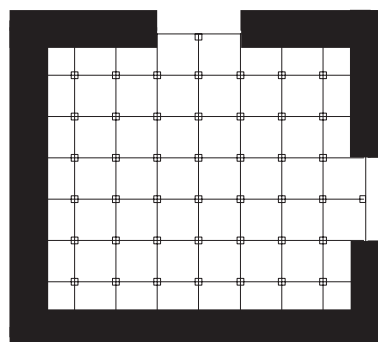

Quarter-Turn / Monolithic / Non-Directional Installation methods will require 4 TacTiles per square metre

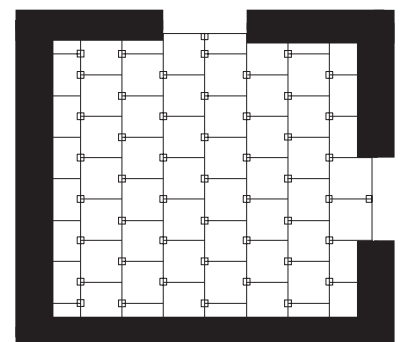

Brick or Ashlar Installation methods will require 4 TacTiles per square metre

Plank Tiles

Applying TacTiles connectors

NOTE: The average number of TacTile connectors needed depends on the size of the plank and the installation method used.

50cm x 1m Plank Averages:

- Quarter-Turn – 3 per sq mt
- Ashlar – 4 per sq mt
- Herringbone – 4 per sq mt

25cm x 1m Plank Averages:

- Quarter-Turn – 7 per sq mt
- Ashlar – 8 per sq mt
- Herringbone – 7 per sq mt

Some applications may require an additional TacTile connector in the center where tile edges meet.


TacTiles connectors should not be used on stairs, ramps or inclines

Lay anchor rows, placing a TacTile connector at every joint. Install carpet using a step method placing a TacTile connector at every corner.


Insert tiles based on approved installation method. TacTiles connectors should be applied based on the following diagrams.

50CM X 1M placement

QUARTER-TURN INSTALLATION

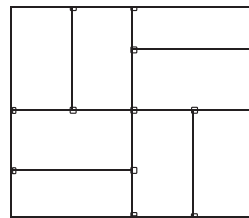


HERRINGBONE INSTALLATION

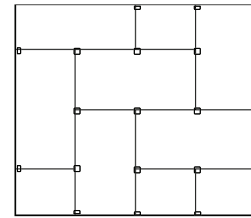


25CM X 1M placement


QUARTER-TURN INSTALLATION

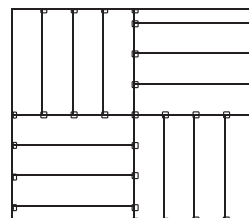

HERRINGBONE INSTALLATION

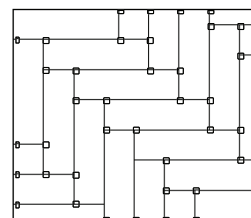

ASHLAR INSTALLATION

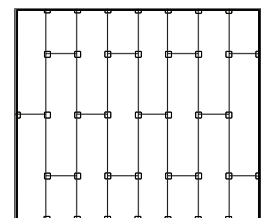

TacTiles

Note: TacTiles are not recommended for installation of carpet tiles to stairs

Note: A TacTile must be applied under every cut tile abutting the field tiles.

NOTE: IF THE SUBFLOOR EXCEEDS THE REQUIRED MOISTURE AND PH REQUIREMENTS THE INSTALLATION OF A BARRIER COAT IS RECOMMENDED TO PREVENT FUTURE ISSUES FROM RISING MOISTURE AND PH.

FAILURE TO CARRY OUT THE CORRECT SUBFLOOR PREPARATION OR REMEDIAL WORKS MAY RESULT IN VOIDING OF THE PRODUCT WARRANTY.

TACTILES ARE ONLY AVAILABLE, AND WARRANTED, FOR USE WITH INTERFACE CARPET TILES. NO WARRANTY EXISTS FOR USE OF TACTILES WITH ANY OTHER MANUFACTURERS FLOOR COVERING.

Note: Glasbac & GlasbacRE Tile

TacTiles will be effective for the life of the installation providing they are not removed or replaced.

Where carpet tiles are replaced TacTiles will only be effective for 2 installation changes after which they need to be replaced to maintain the integrity of the installation.

Note: Graphlar, Graphlex & CushionBac Tile (Graphlex TacTile must be used)

Graphlex TacTiles will be effective for the life of the installation providing they are not removed or replaced.

Where carpet tiles are replaced TacTiles will require replacement for each installation change to maintain the integrity of the installation.



09 TACTILE SUBFLOOR PREPARATION REQUIREMENTS

TacTile can be installed directly over wood, ceramic, marble and stone floors with minimum floor preparation as long as moisture and pH levels are within Interface recommendations. Refer to Appendix 1 & 2.

Notes on Subfloor Moisture and pH requirements

Moisture Test Method

Hygrometer (In Situ Probe or Sealed Hood meter)

Required to be 80% or less when using TacTiles alone. For use of TacTile with higher readings refer Appendix 1 & 2.

Subfloor pH requirement

Required to be pH9 or less when using TacTiles alone. For use of TacTile with higher readings refer Appendix 1 & 2.

10 UNDERFLOOR HEATING

Interface modular carpet may be installed on internally heated floors provided that the surface temperature will not exceed 27 degrees C.

Underfloor heating must be turned off 48 hours prior to commencement of installation and shall not be turned on again until 48 hours after installation is completed to allow the adhesive to set.

11 LAYING DIRECTION

All Interface modular carpets should be installed as per the directions printed on the carton. Installation methods & codes printed on the cartons are:

DIR	Directional
QTR	Quarter Turn

NOTE: ALL NEEDLE PUNCH PRODUCTS MUST BE INSTALLED
QUARTER TURN.

RDM	Random
SPEC	Specification Methods. (Refer to diagrams on inside back cover)

If SPEC code appears on the carton please confirm with the client their preferred installation method.

It is the installers responsibility to confirm the installation method prior to commencement on installation.

12 COMMENCING THE INSTALLATION

Apply Inter-Tac as recommended. Lay one row of modular carpet down each side of the chalk line, then install the modular carpet using the stair method. This will quickly pin point if the grid is running out of alignment.

Alignment

As modular carpet is butted against each other, continually check (with fingers) that the joints are properly aligned. Do not install modular carpet that is out of square by more than 1mm.

Tension

Ensure an even tension throughout the installation as this is vital to the overall appearance.

Lack of tension and pile entrapment may cause poor performance and will impair the appearance of the finished installation.

Over tension of the installation may cause peaking of the tile.

The cumulative space gained in GlasBac or Graphlar® modular carpet products should be 5mm, measured over 11 modular carpet squares (10 joins). Any gain less than this may cause peaking and or buckling.

Cutting

All Interface modular carpet must be cut from the backing side by overlaying the modular carpet, marking and cutting. A template should be used around columns.

Step 1 Firstly effect a light cut without attempting to cut right through.

Step 2 Then crack the modular carpet along the line cut.

Step 3 Complete by cutting right through the fibres with a straight utility or hook knife.

NOTE: MODULAR CARPET CUT ON AN ANGLE OR A CUT EDGE THAT IS EXPOSED TO HEAVY FOOT OR WHEELED TRAFFIC MAY NEED TO BE SEALED WITH LATEX.

NOTE: WHEN ABUTTING INTERFACE CARPET UP TO A HARD SURFACE FINISH OR EDGE TRIM THE TOP OF THE CARPET PILE SHOULD BE LEVEL WITH THE TOP OF THE HARD SURFACE OR EDGE TRIM. IF THE CARPET PILE SITS HIGHER THAN THE HARDSURFACE OR EDGE TRIM AND IS EXPOSED TO HIGH LEVELS OF TRAFFIC THIS MAY CAUSE DAMAGE TO THE CARPET EDGE.

NOTE: ON ACCESS FLOORS AN APPLICATION RATE FOR INTERTAC OF OVER 14 M² MAY BE ACHIEVED IN SOME CASES.

13 ACCESS FLOORING

Off Grid Access Flooring Installation – 500 x 500mm modular carpet


On access floors, off grid installation will mean that the edge of the modular carpet does not correspond with access floor panel joints.

Installation as per standard Interface modular carpet installation instructions.

Intertac adhesive and TacTile are both suitable for modular tile installation over access flooring.

On access floors an application rate for Intertac of over 14m² may be achieved in some cases.

NOTE: IT IS IMPORTANT TO BRING THE MODULAR CARPET RIGHT UP TO THE UNDERSIDE OF THE NOSING, FLUSH WITH THE TREAD, AS THIS WILL SUPPORT THE LEADING EDGE OF THE NOSING AND PREVENT IT ROCKING AND COMING LOOSE. DO NOT BEND MODULAR CARPET OVER THE EDGE OF STAIR STEPS.

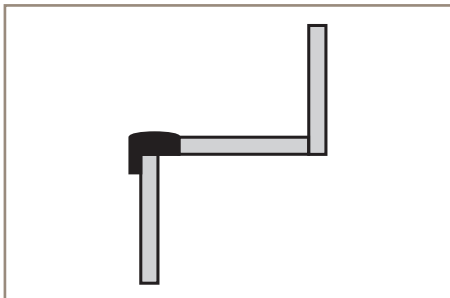

14 STAIRS

Stairnosing

Interface modular carpet cannot be installed over the nose of a stair.

A metal or rubber nosing must be installed.

Riser

Apply Inter-Tac to both the tile backing and the riser.

Allow Inter-Tac to tack up and place carpet for the riser in position.

Tread

Apply Inter-Tac to 100 per cent of tread.

The tread should be fitted after the riser to allow the tread carpet to hold the riser securely in position.

15 INSTALLING FIXTURES & FURNITURE AFTER MODULAR CARPET INSTALLATION

To avoid dislodging modular carpet during furniture and fixture placement, place standard sheets of plywood or cardboard over the complete installation.

If plastic type protection is used, any condensation is the responsibility of the contractor. Do not position adhesive tape on pile of modular carpet.

16 FINISH

Edge Restraint – In the event of an open perimeter area a fixed reducer strip anchored to the floor is recommended. The edge restraint should be the same height as the carpet and finish level with the carpet pile ensuring a smooth transition from one surface to the other.

Nap all slivers and tuft sprouts using napping shears.

It is recommended that all 12th gauge products be checked thoroughly for tuft sprouts and that any noticeable sprouts are napped as part of the finishing procedure.

Apply a final Vacuum or Pile Lifting process.

Ensure that the overall finished appearance is consistent throughout. Correct any defects including incorrect arrow direction.

Upon completion, a further vacuum or pile lift may be required. It is essential that lighting be in service to allow inspection under good lighting conditions.



IT IS RECOMMENDED THAT ALL 12TH GAUGE PRODUCTS BE CHECKED THOROUGHLY FOR TUFT SPROUTS AND THAT ANY NOTICEABLE SPROUTS ARE NAPPED AS PART OF THE FINISHING PROCEDURE.

17 CONCLUSION

These installation procedures are recommended by the manufacturer and installation should only be carried out by experienced and competent carpet installers. Strict adherence to these procedures will result in a quality installation under most conditions. Any situation that can alter the installation procedure, such as the identification of defect material or unusual installation conditions, creates a responsibility for the contractor to notify both the owner and the manufacturer before proceeding.

Any variance from any of these instructions will become the responsibility of the contractor and not the manufacturer and shall void all other wise applicable warranties.

ANY VARIANCE FROM ANY OF THESE INSTRUCTIONS WILL BECOME THE RESPONSIBILITY OF THE CONTRACTOR AND NOT THE MANUFACTURER AND SHALL VOID ALL OTHER WISE APPLICABLE WARRANTIES.



18 INTERFACE CUSHIONBAC™ MODULAR CARPET

Follow the same procedure as outlined for Interface modular carpet.

19 INTERFACE SHEET GOODS – UNBACKED

Apply 100% cover of ARDEX AF241 adhesive with an A2 notched trowel to a properly prepared surface.

1 CONCRETE SUBFLOOR REQUIREMENTS

1 Construction

Concrete subfloor shall be finished off true to grade and in accordance with good building practice and shall be free from rising moisture.

2 Surface

(a) Planeness

When a straight edge 2m long is placed on the surface at any position, no part of the surface is more than 5mm above or below the straight edge.

(b) Finish

New concrete floors shall be steel troweled to a smooth surface but not to a glass finish. They shall be free from score marks, grooves, depressions and scraped free of foreign materials.

3 Dryness

Before installation commences, the dryness of subfloor should be determined. For Interface and Heuga modular carpet the moisture content measured by Hygrometer shall not be greater than 75% RH for use of Intertac Pressure Sensitive adhesive. Where less than 80% RH or less exists, TacTiles can also be used for installation. In cases where slab RH measures between 80% and 90%, a sealant such as ARDEX S8 Slab Seal should first be applied, followed by TacTiles for the installation of Interface carpet tiles.

Moisture testing should be conducted by Hygrometer RH moisture test meters either

APPENDICES



NOTE: REFER TO MOISTURE AND pH TEST RESULT RECOMMENDATION TABLE ON PAGE 17.

In Situ Probe or Sealed Hood Hygrometers. Interface do not recommend measuring substrate moisture content with any method other than Relative Humidity test methods.

IF THE MOISTURE CONTENT IS ABOVE THE RECOMMENDED MAXIMUM READINGS STOP AND DO NOT PROCEED WITH THE INSTALLATION. SEEK FURTHER ADVICE FROM INTERFACE BEFORE PROCEEDING.

4 Cleanliness

Before installation begins, foreign materials such as grease, oil, paint, existing floorcovering and any other harmful materials, should be removed. Any surface treatment or old adhesive that will effect the new adhesive or the holding power of the modular carpet should be treated or removed. The floor shall be vacuumed and washed to ensure a perfect bond.

5 Porosity

All concrete floors or floors that have been filled using a levelling compound should be sealed using a sealer compatible with the backing system.

6 Alkalinity

The subfloor should have an alkalinity level of between pH7 & pH9 to be suitable for carpet installation. In cases where slab pH measures between pH9 and pH12, a sealant such as ARDEX S8 Slab Seal should first be applied, followed by TacTiles for the installation of Interface carpet tiles. Test by wetting the floor with distilled water then using a pH test paper or meter.

SHOULD THE PH LEVEL BE OUTSIDE THIS RANGE STOP AND DO NOT PROCEED WITH THE INSTALLATION. SEEK FURTHER ADVICE FROM INTERFACE BEFORE PROCEEDING.

NOTE: REFER TO ASTM F710-08 FOR SUITABLE pH TEST PROCEDURE.

02 MOISTURE AND PH TEST RESULT RECOMMENDATIONS

Moisture & PH Range Test Results	Interface Installation System
Less than 75% RH & less than pH9	TacTile or Intertac
Between 70% and 80% RH & less than pH 9	TacTile
Between 80% and 90% RH & less than pH 12	Seal substrate with ARDEX S8 Slab Seal and install with TacTile
Above 90% RH, or above pH12	Contact Interface for site specific advice

Note: It is critically important to test all new concrete floors and those with recently applied levelling compounds, to determine the moisture and pH conditions prior to commencing installation of Interface carpet tiles. Armed with the RH and pH readings, the table above should then be used to select the correct installation system for Interface carpet tile installations.


FAILURE TO TEST THE FLOOR MAY VOID ANY Interface WARRANTY ON THE INSTALLED CARPET TILES.



03 INTERFACE INSTALLATION METHODS AND CODES


DIRECTIONAL Installation – Code DIR

An arrow is printed on the back of each modular tile to indicate pile direction. Make sure the arrows point in the same direction throughout your installation.

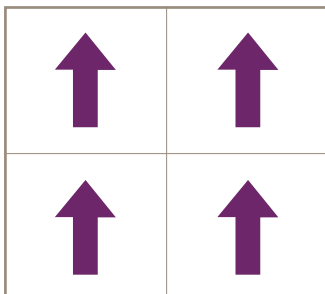


QUARTER TURN Installation – Code QTR

In this case, the arrows should be turned 90 degrees every other modular tile.

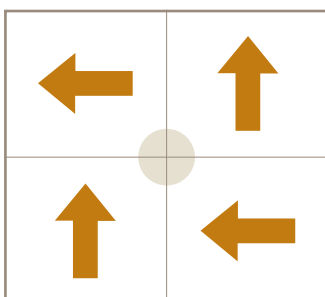


RANDOM Installation – Code RDM

This pattern allows installation of modular tiles without regard to arrow direction.

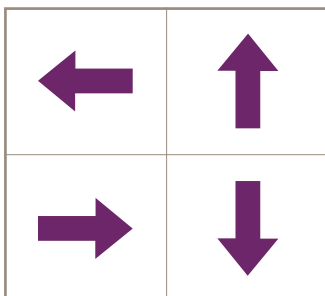


ASHLAR Installation

This pattern is created by offsetting the side joins of the modular tiles. All arrows should point in the same direction.

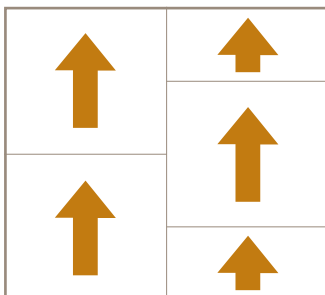

BRICK Installation

This pattern is created by offsetting the front and back joins of the modular tiles. All arrows should point in the same direction.

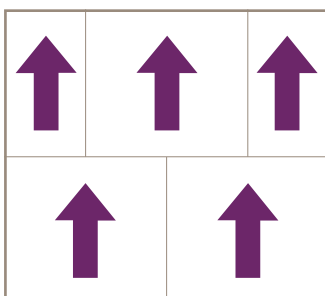

Code SPEC – Specification Methods can represent either: Directional, Quarter Turn, Ashlar or Brick Installation.

The codes printed on the cartons indicate the manufacturers' recommended installation method. However it is the installers' responsibility to confirm the clients' preferred installation method prior to commencement of installation.



CONTACTS

Australia

Interface Australia

Phone: 02 8332 2400

Fax: 02 9318 1996

Email: enquiries.ap@Interface.com

Web: www.Interface.com

Interface 24/7 National Hotline

For urgent installation, cleaning or maintenance enquiries:

Phone: 1800 785 277

New Zealand

Inzide Commercial Ltd

Phone: 0800 800 656

Email: enquiries@inzide.co.nz

Web: www.inzide.co.nz

Singapore

Phone: +65 6478 1510

Web: www.Interface.com

Hong Kong

Phone: +85 2 2802 0838

Email: hkgweb@Interface.com

Web: www.Interface.com

China

Phone: +86 400 110 8687

Phone: +86 800 828 2687

Email: cnweb@Interface.com

Web: www.Interface.com.cn

Japan

Phone: +81 3 5733 5211

Email: jpnweb@interface.com

Web: www.Interface.com

Thailand

Phone: +66 2459 1052

Web: www.Interface.com

Indonesia

Phone: +62 21 582 3119

Web: www.interface.com

Korea

Phone: +822 2555 1734

Web: www.interface.com

Malaysia

Phone: +60 12 431 1226

Web: www.Interface.com

Vietnam and Indochina

Phone: +668 182 29340

Web: www.Interface.com

® Interface, InterfaceFLOR, Intersept, GlasBac & System Six are registered trademarks of Interface Inc.
® InterTac is a registered trademark of Interface Aust Pty Limited.
® Airstep is a registered trademark of Bridgestone Australia Ltd.
™ i2 is a trademark of Interface Aust Pty Limited.